




Ammon Fiber Inspection Checklist

The first 4 items can be completed in any order. After inspection you will receive an orange Service Line Rough in Sticker, with details to schedule your fiber installation.

- ☐ **Install a 3/4" Orange conduit from the correct yard box out by the street to an acceptable location against the foundation of your home. Call For Fiber Service Line Inspection.**

100 feet of conduit is included in the permit fee and can be picked up at the Fiber Department located next to Public Works. This conduit needs to run between the fiber box by the street and up to the side of the home. This box is located by the street, bordering a neighboring property, colored green or gray, and should have other orange conduits inside of it. This yard box was installed by your developer and should be flush with the ground. This conduit should be installed at least 18 inches deep and be at least 2 feet from any gas connections coming up to the house.

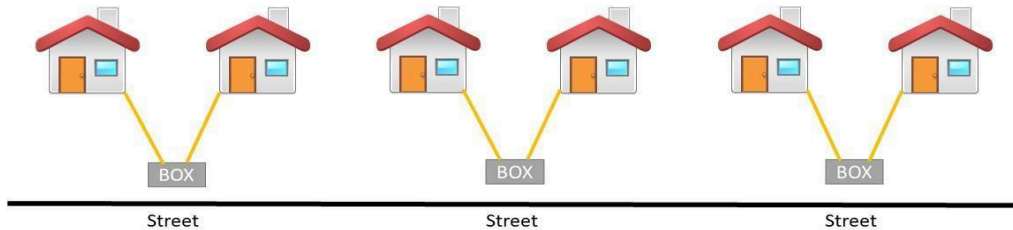

- ☐ **Install a 1" Carlon Conduit from the exterior of the home to the interior location where you want to set the indoor fiber optic equipment.**

One end of this conduit needs to be exposed on the exterior of the home directly above the end of your underground conduit stubbed out of the ground against your foundation. The other end needs to terminate where you want to set your indoor equipment. Usually this is the media panel where the cat5 for the house is run. Products like Blue Carlon Conduit (smurf tube) are easily run and readily available. **A string must be run through the conduit which will be used to pull in the fiber line and verify the tube is valid.** Once again make sure that you leave a few inches sticking out of your exterior wall.

- ☐ **Install a standard 120v outlet within a few feet of the interior location so the indoor equipment can power.**
- ☐ **Before sheetrock and insulation, Call for Fiber Rough-In Inspection.**

The above items must be completed before continuing

- ☐ **Schedule Fiber install with the City Fiber Department at (208) 612-4020. This is the Fiber Final Inspection.**

Fiber can be installed as soon as siding and indoor finishes are done. Please allow up to ten business days for installation.

Final inspection will not pass until all the conditions are met and fiber is installed.
Fiber must be installed before receiving a CO.